



Two Large Terminals:

- #1 Connect one large terminal to the vehicle's main battery via a fuse holder.
- #2 Connect the other large terminal to the sound system's auxillary battery/batteries, again, via the fuse holder.
- * Note: The large terminals can be wired in either direction.

Two Small Terminals:

- #1 Connect one small terminal to true ignition power from your ignition harness. When tested, true ignition will keep power through the cranking cycle of the starter. Verify that your power source is true ignition.
- #2 Connect to chassis ground.
- * Note: The small terminals can be wired in either direction.

